

NETWORK THEORY 3

Digital Filter

Chapter 3

Design and Realization of Recursive Digital Filters – IIR Filters

Prof. Dr.-Ing. I. Willms

UNIVERSITÄT
DUISBURG
ESSEN

Fachgebiet
Nachrichtentechnische Systeme

Network Theory 3
S. 1



3.1 Prefaces to IIR Digital Filter

The design and the realization of digital filters means that magnitude or phase characteristic of the transfer function must be specified (in most cases within the limits of a given tolerance pattern) and from that the filter coefficients have to be determined.

Design method: Approximate transform of the system function of an analog reference system to a corresponding system function $H_Z(z)$.

Properties of the design method:

- This system function can be specified based e.g. on a catalog of filters (including the set of corresponding filter coefficient values)
- Based on the found system function the function $H_Z(z)$ is determined using an „Impulse-invariance method“ or a „Bilinear transform“



3.2 Approximation procedure for analogue low-pass reference systems

Approximation procedures for arbitrary analogue high-passes, band-pass filters and band-stops can be achieved on the basis of the system function $H_L(p)$ of a low-pass reference filter.


One forms first
$$A_L(p) = H_L(p) \cdot H_L(-p)$$

Then the pole-zero plot of this result is determined giving double poles and zeroes.

It can be shown that poles and zeros of $H_L(p)$ form a mirror-image compared to $H_L(-p)$.



3.2 Approximation procedure for analogue low-pass reference systems

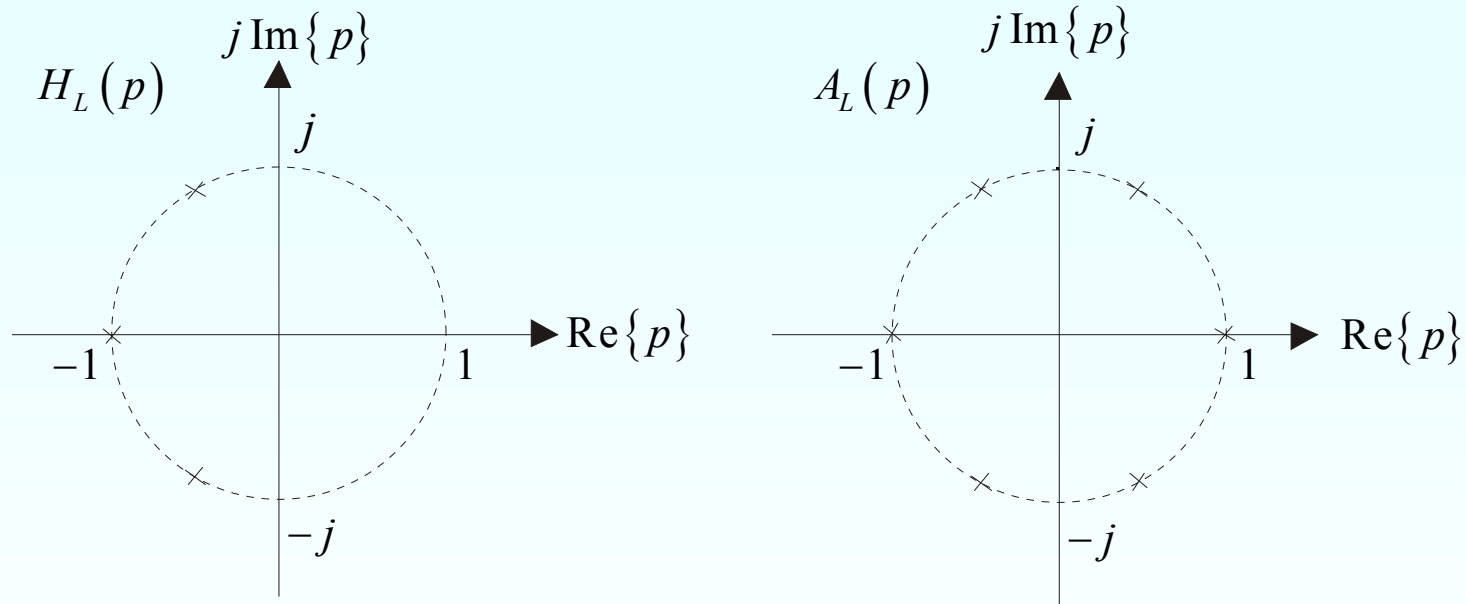

Pole zero pattern of the system function $H_L(p)$ of a BUTTERWORTH low-pass of 3rd Order and of the associated product function $A_L(p)$

3.2 Approximation procedure for analogue low-pass reference systems

Provided that filter coefficients are realvalued and poles being only in the left half p-plane, it follows with

$$H_L(j\omega) = H_F(\omega) \quad \text{and} \quad H_L(-j\omega) = H_F^*(\omega)$$

for the approximation function $A(\omega)$ (squared magnitude frequency response):

$$\text{with } A(\omega) = A_L(j\omega)$$

$$A(\omega) = H_L(j\omega) \cdot H_L(-j\omega) = H_F(\omega) \cdot H_F^*(\omega) = |H_F(\omega)|^2$$

Example of a Butterworth approximation:

$$A(\omega) = \frac{1}{1 + \left(\frac{\omega}{\omega_T}\right)^{2N}} = |H_F(\omega)|^2 \quad \text{with } N = \text{Order of the low-pass system}$$



3.2 Approximation procedure for analogue low-pass reference systems

The reasons for choosing this function are as follows:

$A(\omega)$ is a real and an even function in ω .

Thus $A(\omega)$ can only be represented by a denominator polynomial with purely even exponents leading to

$$A_N(\Omega) = \frac{1}{k_0 + k_2\Omega^2 + k_4\Omega^4 \dots + k_{2N}\Omega^{2N}} \quad \text{with } \Omega = \frac{\omega}{\omega_T}$$

If it is required $A_N(0) = 1$, $A_N(\Omega) \rightarrow 0$ for $\Omega \rightarrow \infty$

and the sharpest possible drop-off of $A_N(\Omega)$ for $\Omega > 1$ and $A_N^2(1) = 1/2$ it holds:

$$k_0 = 1 \quad k_v = 0 \quad \forall v = 2(1)2N - 2 \quad k_{2N} = 1$$

Reason: The expression $1 + k_{2N}\Omega^{2N}$ gives the sharpest drop-off compared with all other expressions $1 + k_{2v}\Omega^{2v}$ with $v = 1(1)N - 1$



3.2 Approximation procedure for analogue low-pass reference systems

After the determination of the filter order N , one gets the assigned function:

$$A_L(p) = A\left(\frac{p}{j}\right) = \frac{1}{1 + \left(\frac{p}{j\omega_T}\right)^{2N}}$$



3.2 Approximation procedure for analogue low-pass reference systems

The last formula can also be rewritten as follows:

$$A_L(p) = \frac{1}{1 + \left(\frac{p}{j\omega_T}\right)^{2N}} = \frac{1}{1 + \left(\frac{P}{j}\right)^{2N}} = \frac{1}{1 + (-P^2)^N} \quad \text{with } P = \frac{p}{\omega_T}$$

In order to obtain the poles of $A_L(p)$ the denominator must be zero leading to:

$$(-1)^N P^{2N} = -1 \quad \text{or} \quad P^{2N} = -1 \quad \text{for even } N \quad \text{and} \quad P^{2N} = 1 \quad \text{for odd } N \quad \text{or}$$

$$P_{\infty v}^{2N} = -1 = e^{j\pi} = e^{j\pi(2v+1)} \quad \text{for even } N \quad \text{and} \quad v \geq 0 \quad \text{as well as}$$

$$P_{\infty v}^{2N} = +1 = e^{j\pi 2v} \quad \text{for odd } N \quad \text{and} \quad v \geq 0$$

This means:

$$P_{\infty v} = e^{j\pi(2v+1)/2N} = e^{j\pi(v+1/2)/N} \quad \text{for even } N \quad \text{and} \quad v \geq 0 \quad \text{as well as}$$

$$P_{\infty v} = e^{j\pi 2v/2N} = e^{j\pi v/N} \quad \text{for odd } N \quad \text{and} \quad v \geq 0$$



3.2 Approximation procedure for analogue low-pass reference systems

The index v needs only to run from 0 to $2N-1$, larger values lead to same pole positions as the exponential function with imaginary exponent is periodic in 2π .

Furthermore it holds:

$$|P_{\infty v}| = 1 \quad \text{or} \quad |p_{\infty v}| = \omega_T$$



Thus all normalised poles lie on the unit circle!

Now we can rewrite $A_L(p)$ as follows:

$$A_L(p) = \frac{\omega_T^{2N}}{\prod_{v=0}^{2N-1} (p - p_{\infty v})} \quad \text{with } p_{\infty v} = \omega_T P_{\infty v} \quad \text{or} \quad A_{LN}(P) = \frac{1}{\prod_{v=0}^{2N-1} (P - P_{\infty v})}$$



3.2 Approximation procedure for analogue low-pass reference systems

So for the $2N$ poles holds:

$$p_{\infty\nu} = \begin{cases} \omega_T \cdot e^{j\pi\frac{\nu}{N}} & \text{for odd } N \\ \omega_T \cdot e^{j\pi(\nu+\frac{1}{2})\frac{1}{N}} & \text{for even } N \text{ with } \nu = 0(1)(2N-1) \end{cases}$$

The formula above describes the poles of $A_L(p)$ which includes poles from $H_L(p)$ and $H_L(-p)$. For the system function $H_L(p)$ only those poles should be chosen which lead to a stable system (those in the left open p-plane).

According to this it must hold:

$$H_L(p) = \frac{\omega_T^N}{\prod_{\nu} (p - p_{\infty\nu})} \quad \text{and} \quad H_{LN}(P) = \frac{1}{\prod_{\nu} (P - P_{\infty\nu})}$$

$$\frac{1}{2}\pi < \frac{\nu}{N}\pi < \frac{3}{2}\pi \quad \text{for odd } N \quad \text{and} \quad \frac{1}{2}\pi < \frac{\left(\frac{1}{2} + \nu\right)}{N}\pi < \frac{3}{2}\pi \quad \text{for even } N$$



3.2 Approximation procedure for analogue low-pass reference systems

The table shows polynomials of first to 6th order:

N	BUTTERWORTH denominator polynomial
1	$(p + \omega_T)$
2	$(p^2 + \sqrt{2}\omega_T p + \omega_T^2)$
3	$(p^2 + \omega_T p + \omega_T^2) \cdot (p + \omega_T)$
4	$(p^2 + 0.7653\omega_T p + \omega_T^2) \cdot (p^2 + 1.84776\omega_T p + \omega_T^2)$
5	$(p + \omega_T) \cdot (p^2 + 0.6180\omega_T p + \omega_T^2) \cdot (p^2 + 1.6180\omega_T p + \omega_T^2)$
6	$(p^2 + 0.5176\omega_T p + \omega_T^2) \cdot (p^2 + 1.9318\omega_T p + \omega_T^2) \cdot (p^2 + \sqrt{2}\omega_T p + \omega_T^2)$

Denominator polynomial of $A_L(p)$

3.2 Approximation procedure for analogue low-pass reference systems

Example: Determination of the low-pass system function $H_L(p)$ from the BUTTERWORTH approximation function $A(\omega)$

The system function for a BUTTERWORTH low pass of 3rd order should be determined.

For $N = 3$ it is obtained:

$$A_N(\Omega) = \frac{1}{1 + \Omega^6} = \frac{1}{1 + \left(\frac{\omega}{\omega_T}\right)^6}$$

The corresponding system function $H_L(p)$ results to:

$$H_L(p) = \frac{\omega_T^3}{\prod_{\nu=1}^3 (p - p_{\infty\nu})}$$



3.2 Approximation procedure for analogue low-pass reference systems

The poles of $H_L(p)$ can be determined by means of

$$p_{\infty \nu} = \omega_T e^{j\pi \frac{\nu}{N}} \quad \text{with the condition of} \quad \frac{\pi}{2} < \frac{\nu\pi}{3} < \frac{3\pi}{2}$$

Thus one receives:

$$p_{\infty 2} = \omega_T \cdot e^{j\pi \frac{2}{3}} = -\frac{\omega_T}{2} + j \frac{\sqrt{3} \omega_T}{2}$$

$$p_{\infty 3} = \omega_T \cdot e^{j\pi \frac{3}{3}} = -\omega_T$$

$$p_{\infty 4} = \omega_T \cdot e^{j\pi \frac{4}{3}} = -\frac{\omega_T}{2} - j \frac{\sqrt{3} \omega_T}{2}$$

Note the conjugated poles 2 and 4, the other poles 0, 1 and 5 are in the right half p-plane



3.2 Approximation procedure for analogue low-pass reference systems

Thus the system function results as follows:

$$H_L(p) = \frac{\omega_T^3}{(p - p_{\infty 2}) \cdot (p - p_{\infty 3}) \cdot (p - p_{\infty 4})}$$

Combining conjugated poles 2 and 4, the expression can be rewritten as follows:

$$\begin{aligned} H_L(p) &= \frac{\omega_T^3}{\left[p^2 - (p_{\infty 2} + p_{\infty 2}^*)p + p_{\infty 2}p_{\infty 2}^* \right] \cdot (p - p_{\infty 3})} \\ &= \frac{\omega_T^3}{(p^2 + \omega_T p + \omega_T^2) \cdot (p + \omega_T)} \end{aligned}$$



3.2 Approximation procedure for analogue low-pass reference systems

Other approximation functions are in use:

- the CHEBYSHEV function
- the BESSEL function
- the CAUER function

In the following slides we deal with the CHEBYSHEV function.

There are two types of it:

Type 1 shows in the pass-band a ripple of constant amplitude but no ripple in the stop-band.

Type 2 shows no ripple in the pass-band but in the stop-band (also with a constant amplitude).



3.2 Approximation procedure for analogue low-pass reference systems

Here only type 1 will be treated. For it applies:

$$A(\omega) = \frac{1}{1 + \varepsilon^2 C_N^2(\omega)} = |H_F(\omega)|^2 \quad \text{with } x = \frac{\omega}{\omega_d}$$



CHEBYSHEV polynomials of higher order can be determined based on $C_0(x) = 1$ and $C_1(x) = x$ using the following recursion formula:

$$C_N(x) = 2x \cdot C_{N-1}(x) - C_{N-2}(x)$$

$$A_L(p) = A\left(\frac{p}{j}\right) = \frac{1}{1 + \varepsilon^2 C_N^2\left(\frac{p}{j\omega_d}\right)} \quad \text{with } A(\omega) = |H_L(j\omega)|^2$$



3.2 Approximation procedure for analogue low-pass reference systems

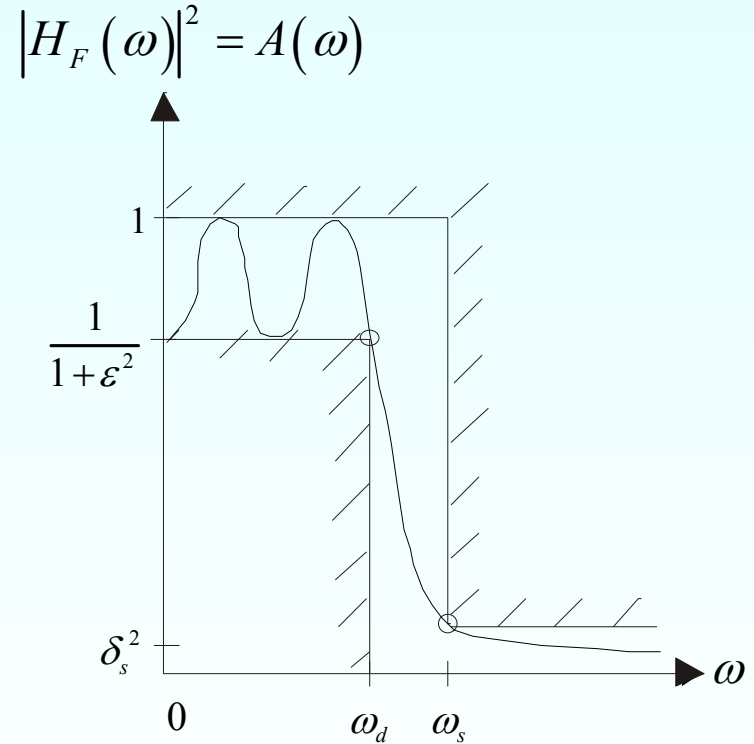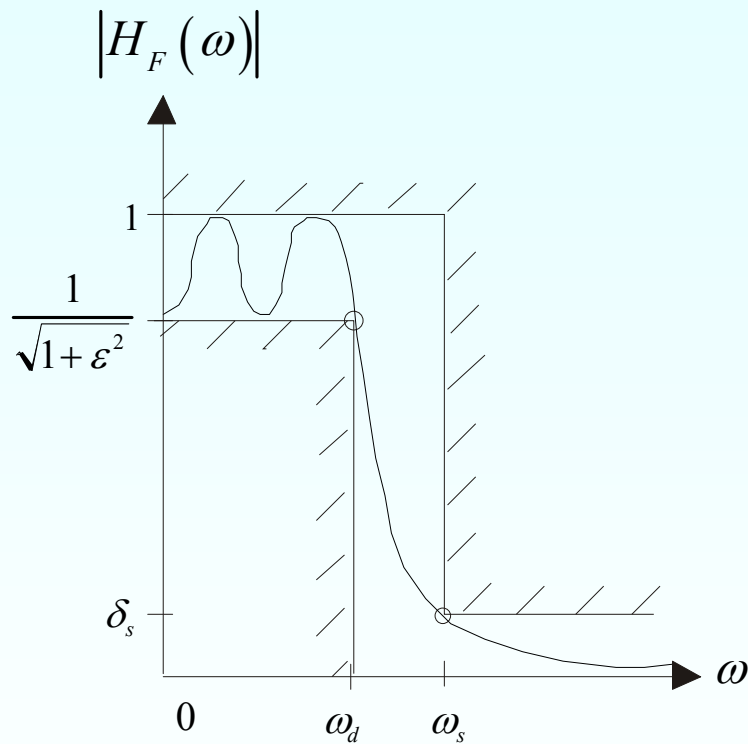

CHEBYSHEV low-pass tolerance schema (type 1, $N = 4$) for $|H_F(\omega)|$ and for $|H_F(\omega)|^2 = A(\omega)$

3.2 Approximation procedure for analogue low-pass reference systems

Again for $H_L(p)$ only those poles of $A_L(p)$ are chosen which lie in the left open p -half plane.

$$H_L(p) = \frac{K}{\prod_{\nu=1}^N (p - p_{\infty\nu})}$$

For these poles (without proof) the relationship holds:

$$p_{\infty\nu} = -\omega_d \cdot \sinh(a) \cdot \sin\left(\frac{2\nu-1}{2N} \pi\right) + j\omega_d \cdot \cosh(a) \cdot \cos\left(\frac{2\nu-1}{2N} \pi\right)$$

Here for a applies:

$$a = \frac{1}{N} \operatorname{ar\,sinh}\left(\frac{1}{\varepsilon}\right) = \frac{1}{N} \operatorname{ar\,sinh}\left(\frac{1 - \delta_d}{\sqrt{2\delta_d - \delta_d^2}}\right)$$



3.2 Approximation procedure for analogue low-pass reference systems

For even N one determines the constant K appearing in the system function above by means of:

$$K = \frac{\prod_{\nu=1}^N |p_{\infty\nu}|}{\sqrt{1 + \varepsilon^2}}$$

For odd N it applies:

$$K = \prod_{\nu=1}^N |p_{\infty\nu}|$$



3.2 Approximation procedure for analogue low-pass reference systems

Example: Determination of a second order low-pass system function $H_L(p)$ using a CHEBYSHEV approximation function $A(\omega)$ with $r_d = 1 \text{ dB}$

$$A(\omega) = \frac{1}{1 + \varepsilon^2 C_N^2\left(\frac{\omega}{\omega_d}\right)}$$

The ripple in the pass band defined in dB is:

$$r_d = 10 \cdot \log_{10}\left(\frac{A_{\max}}{A_{\min}}\right) [dB]$$

From this ε can be determined as follows using: $A_{\min} = \frac{1}{1 + \varepsilon^2} A_{\max} = 1$

$$\varepsilon^2 = 10^{\frac{r_d}{10}} - 1 = 0.26 \text{ for } r_d = 1 [dB]$$



3.2 Approximation procedure for analogue low-pass reference systems

For the CHEBYSHEV polynomial 2nd order then holds:

$$\begin{aligned}C_2(x) &= 2x \cdot C_1(x) - C_0(x) \quad \text{with } x = \frac{\omega}{\omega_d} \\ &= 2x^2 - 1 \\ &= 2 \left(\frac{\omega}{\omega_d} \right)^2 - 1\end{aligned}$$

Thus it results:

$$A(\omega) = \frac{1}{1 + \varepsilon^2 \left[2 \cdot \left(\frac{\omega}{\omega_d} \right)^2 - 1 \right]^2} \quad A_L(p) = A\left(\frac{p}{j}\right) = \frac{1}{1 + \varepsilon^2 \left[2 \left(\frac{p}{j\omega_d} \right)^2 - 1 \right]^2}$$



3.2 Approximation procedure for analogue low-pass reference systems

The system function $H_L(p)$ then gives:

$$H_L(p) = \frac{K}{(p - p_{\infty 1}) \cdot (p - p_{\infty 2})}$$

For the two poles the next equations can be used:

$$p_{\infty 1} = \omega_d \cdot \left[-\sinh(a) \sin\left(\frac{\pi}{4}\right) + j \cosh(a) \cos\left(\frac{\pi}{4}\right) \right]$$

$$p_{\infty 2} = \omega_d \cdot \left[-\sinh(a) \sin\left(\frac{3\pi}{4}\right) + j \cosh(a) \cos\left(\frac{3\pi}{4}\right) \right]$$

$$\text{with } a = \frac{1}{2} \operatorname{ar} \sinh\left(\frac{1}{\varepsilon}\right)$$



3.2 Approximation procedure for analogue low-pass reference systems

One determines the constant K by considering the behaviour at DC and thus with the equation:

$$K = \frac{|p_{\infty 1}| \cdot |p_{\infty 2}|}{\sqrt{1 + \varepsilon^2}} \text{ due to } H_L(0) = \frac{1}{\sqrt{1 + \varepsilon^2}}$$

After using the values given above one receives in total:

$$a = 0.7131$$

$$p_{\infty 1} = \omega_d [-0.548 + j0.8946]$$

$$p_{\infty 2} = \omega_d [-0.548 - j0.8946]$$

$$K = 0.9805 \cdot \omega_d^2$$

$$\rightarrow H_L(p) = \frac{0.9805 \omega_d^2}{(p - [-0.548\omega_d + j 0.8946\omega_d]) \cdot (p - [-0.548\omega_d - j 0.8946\omega_d])}$$



3.2 Approximation procedure for analogue low-pass reference systems

Note:

The conjugated complex pair of poles can be rewritten as follows leading to real coefficients:

$$H_L(p) = \frac{0.9805 \omega_d^2}{p^2 + 1.1 \cdot \omega_d p + \omega_d^2}$$



3.3 Derivation of system functions by frequency transformation

If by means of $H_L(p)$ the low-pass prototype system function is given the system function of another system (low-pass ... band-stop etc.) can be derived which shows the same properties. As a preparation for this $H_L(p)$ is written in the form $H_L(p_1)$

$H_{tL}(p)$ is the symbol for a prototyp function derived from the low-pass prototype function $H_L(p_1)$ by the appropriate transform

For the transform the following relation are used:

$$H_{tL}(p) = H_L(p_1(p))$$

$$\text{and } H_{tLN}(P) = H_{LN}(P_1(P))$$



3.3 Derivation of system functions by frequency transformation

In the following the mappings $p_1(p)$ for the transformation of low-pass prototypes are specified:

$$\text{LP} \rightarrow \text{HP}: \quad p_1(p) = \frac{\omega_H}{p} \omega_T \quad \text{or} \quad P_1(P) = P^{-1} \quad \text{for} \quad \omega_T = \omega_H$$

$$\text{LP} \rightarrow \text{BP}: \quad p_1(p) = \frac{p^2 + \omega_{Bo} \cdot \omega_{Bu}}{p \cdot (\omega_{Bo} - \omega_{Bu})} \omega_T \quad \text{or} \quad P_1(P) = \frac{\Delta\Omega}{P + P^{-1}}$$

for $\Delta\Omega = \frac{\omega_{Bo} - \omega_{Bu}}{\omega_{Bo} \cdot \omega_{Bu}} \omega_T$

$$\text{LP} \rightarrow \text{BS}: \quad p_1(p) = \frac{p \cdot (\omega_{So} - \omega_{Su})}{p^2 + \omega_{So} \cdot \omega_{Su}} \omega_T \quad \text{or} \quad P_1(P) = \frac{P + P^{-1}}{\Delta\Omega}$$



3.3 Derivation of system functions by frequency transformation

Here a list of used symbols:

ω_T : The 3dB(cut-off) frequency of the low-pass prototype

ω_{Tt} : The 3dB(cut-off) frequency of the derived low-pass

ω_H : The 3dB(cut-off) frequency of the derived high-pass

ω_{Bu}, ω_{Bo} : The lower and upper 3dB-Frequency of the pass band

ω_{Su}, ω_{So} : The lower and upper 3dB-Frequency of the stop band



3.3 Derivation of system functions by frequency transformation

Example: Low-pass to Band-pass transformation

The system function of a BUTTERWORTH low-pass 2nd. order with its 3dB-frequency is given:

$$H_L(p_1) = \frac{\omega_T^2}{p_1^2 + \sqrt{2} \omega_T \cdot p_1 + \omega_T^2}$$

Wanted is the system function of a band-pass filter $H_{tL}(p)$



3.3 Derivation of system functions by frequency transformation

Substituting in the given prototype system function $H_L(p_1)$ the relation

$$p_1(p) = \frac{p^2 + \omega_{Bo} \omega_{Bu}}{p(\omega_{Bo} - \omega_{Bu})} \omega_T$$

leads to the wanted band-pass filter with the system function:

$$H_{iL}(p) = \frac{\omega_T^2}{\left[\frac{p^2 + \omega_{Bo} \omega_{Bu}}{p(\omega_{Bo} - \omega_{Bu})} \cdot \omega_T \right]^2 + \sqrt{2} \omega_T \cdot \left[\frac{p^2 + \omega_{Bo} \omega_{Bu}}{p(\omega_{Bo} - \omega_{Bu})} \cdot \omega_T \right] + \omega_T^2}$$



3.3 Derivation of system functions by frequency transformation

Rewriting the formula shown above leads to:

$$H_{iL}(p) = \frac{a^2 \cdot p^2}{p^4 + \sqrt{2} a \cdot p^3 + (2b + a^2) \cdot p^2 + \sqrt{2} ab \cdot p + b^2}$$

with

$$a = \omega_{Bo} - \omega_{Bu}$$

$$b = \omega_{Bo} \omega_{Bu}$$



3.4 Design of IIR Digital filter by means of impulse invariance method

With the help of the impulse invariance method one obtains from a given system function $H_L(p)$ a causal system function $H_z(z)$ of the assigned digital filter as follows:

1. The digital filter impulse response $h(k)$ is determined on the basis of the impulse response $h(t)$ of a continuous (analog) system using the samples $h(kT_A)$
2. Onto $h(k)$ then the z-transform is applied



3.4 Design of IIR Digital filter by means of impulse invariance method

Here the following conditions must be assumed:

1. The given system function $H_L(p)$ has real coefficients
2. In total M single poles lie in the left open p -half plane
3. The nominator order is smaller than the denominator order

In this case $H_L(p)$ can be rewritten as a partial fraction like this:

$$H_L(p) = \sum_{m=1}^M \frac{A_m}{p - p_{\infty m}}$$

Each fraction in the p -domain corresponds to an expression $h_m(t)$ in the time domain (i.e. one partial signal of the total impulse response):

$$h_m(t) = \begin{cases} A_m e^{p_{\infty m} t} & \text{for } t \geq 0 \\ 0 & \text{else} \end{cases}$$



3.4 Design of IIR Digital filter by means of impulse invariance method

Sampling this partial signal $h_m(t)$ with an ideal sampler with the sampling period T_A gives for the sampled signal:

$$h_{am}(t) = h_m(t) \cdot \sum_{k=-\infty}^{+\infty} \delta(t - kT_a) = \sum_{k=0}^{\infty} A_m e^{p_{\infty m} k T_a} \cdot \delta(t - kT_a)$$

Laplace transforming gives:

$$H_{Lam}(p) = \sum_{k=0}^{\infty} A_m e^{p_{\infty m} k T_a} \cdot e^{-pkT_a}$$

With $z = e^{pT_a}$ and the constants $z_{\infty m} = e^{p_{\infty m} T_a}$ then one receives:

$$H_{Lam}(p) = A_m \cdot \sum_{k=0}^{\infty} z_{\infty m}^k \cdot z^{-k} = A_m \cdot Z\{z_{\infty m}^k\} = A_m \frac{z}{z - z_{\infty m}}$$



3.4 Design of IIR Digital filter by means of impulse invariance method

Summarising the expressions for all M poles gives:

$$H_Z(z) = \sum_{m=1}^M H_{zm}(z)$$

A comparison with the system function of an analog system show how the method works for turning an analog system into a discrete system:

$$H_L(p) = \sum_{m=1}^M \frac{A_m}{p - p_{\infty m}} \Leftrightarrow H_z(z) = \sum_{m=1}^M \frac{A_m \cdot z}{z - z_{\infty m}}$$



3.4 Design of IIR Digital filter by means of impulse invariance method

Reasons for obtaining only an approximation:

Each discrete Signal shows periodic properties in the frequency domain.

Thus any continuous (any non-ideal) frequency response shows overlapping (aliasing) when turned into a discrete system.

The errors due to aliasing can be reduced by the following measures:



- Increase of the sampling rate (leading to an increase of the filter order)
- Increase of the order of the analog reference system for reducing values in the stop-band (where aliasing takes place)

The next figure shows that only to strongly band limited analog systems the impulse invariance method should be applied.

Otherwise infinitely high values of $H_{aL}(j\omega)$ result.



3.4 Design of IIR Digital filter by means of impulse invariance method

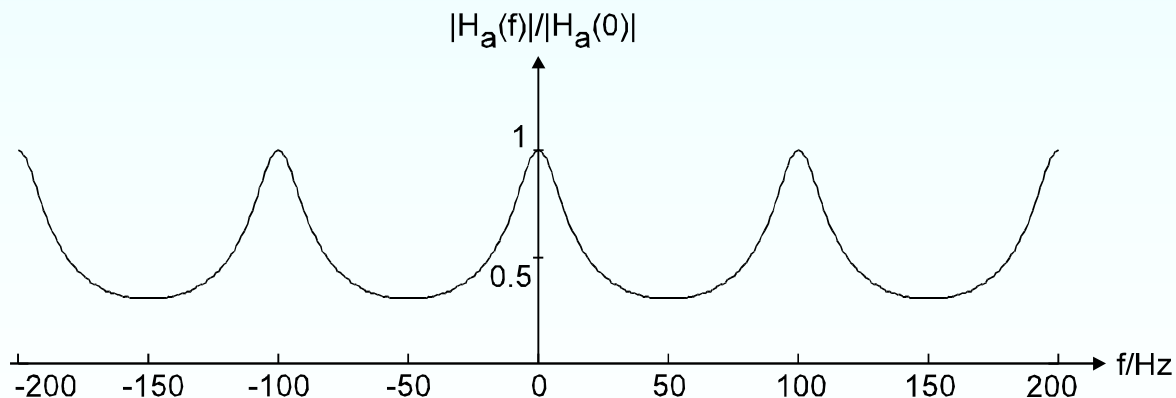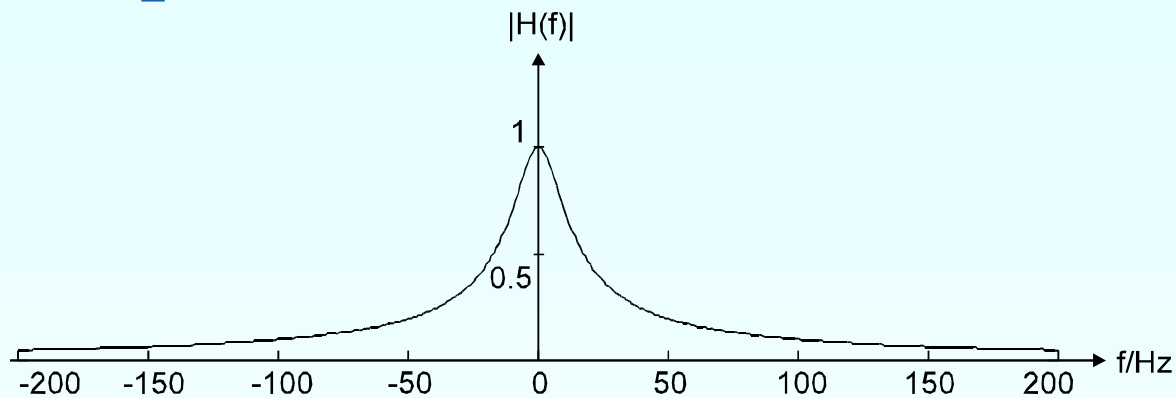

Transfer function of an analog prototype with $f_g = 10\text{Hz}$
and of the corresponding digital filter with $f_a = 100\text{ Hz}$

3.4 Design of IIR Digital filter by means of impulse invariance method

Example: Determination of a digital low-pass system with $H_z(z)$ from the analog low-pass system with $H_L(p)$ according to the impulse invariance method.

It is assumed that after the first two steps described above the following continuous system function (BUTTERWORTH low-pass second order) was found:

$$H_L(p) = \frac{\omega_T^2}{p^2 + \sqrt{2} \omega_T p + \omega_T^2}$$

According to step 3 the partial fraction description is as follows:

$$H_L(p) = \frac{-j \frac{\omega_T}{\sqrt{2}}}{p - \left[-\frac{\omega_T}{\sqrt{2}} + j \frac{\omega_T}{\sqrt{2}} \right]} + \frac{j \frac{\omega_T}{\sqrt{2}}}{p - \left[-\frac{\omega_T}{\sqrt{2}} - j \frac{\omega_T}{\sqrt{2}} \right]}$$



3.4 Design of IIR Digital filter by means of impulse invariance method

In Step 4 the partial addends are converted into:

$$H_{L1}(p) = \frac{-j \frac{\omega_T}{\sqrt{2}}}{p - \left[-\frac{\omega_T}{\sqrt{2}} + j \frac{\omega_T}{\sqrt{2}} \right]} \Leftrightarrow H_{z1}(z) = \frac{-j \frac{\omega_T}{\sqrt{2}} \cdot z}{z - e^{\left(-\frac{\omega_T}{\sqrt{2}} + j \frac{\omega_T}{\sqrt{2}} \right) T_a}}$$

$$H_{L2}(p) = \frac{j \frac{\omega_T}{\sqrt{2}}}{p - \left[-\frac{\omega_T}{\sqrt{2}} - j \frac{\omega_T}{\sqrt{2}} \right]} \Leftrightarrow H_{z2}(z) = \frac{j \frac{\omega_T}{\sqrt{2}} \cdot z}{z - e^{\left(-\frac{\omega_T}{\sqrt{2}} - j \frac{\omega_T}{\sqrt{2}} \right) T_a}}$$



3.4 Design of IIR Digital filter by means of impulse invariance method

The sum of $H_{z1}(z)$ and $H_{z2}(z)$ results then to the digital low-pass system function:

$$H_z(z) = H_{z1}(z) + H_{z2}(z) = \frac{-j \frac{\omega_T}{\sqrt{2}} \cdot z}{z - e^{\left(-\frac{\omega_T}{\sqrt{2}} + j \frac{\omega_T}{\sqrt{2}}\right) T_a}} + \frac{j \frac{\omega_T}{\sqrt{2}} \cdot z}{z - e^{\left(-\frac{\omega_T}{\sqrt{2}} - j \frac{\omega_T}{\sqrt{2}}\right) T_a}}$$

After some rewritings one receives:

$$H_z(z) = \frac{j \frac{\omega_T}{\sqrt{2}} \cdot e^{-\frac{\omega_T}{\sqrt{2}} T_a} \left(e^{-j \frac{\omega_T}{\sqrt{2}} T_a} - e^{j \frac{\omega_T}{\sqrt{2}} T_a} \right) \cdot z^{-1}}{1 - e^{-\frac{\omega_T}{\sqrt{2}} T_a} \left(e^{j \frac{\omega_T}{\sqrt{2}} T_a} + e^{-j \frac{\omega_T}{\sqrt{2}} T_a} \right) \cdot z^{-1} + e^{-\frac{\omega_T}{\sqrt{2}} T_a} z^{-2}}$$



3.4 Design of IIR Digital filter by means of impulse invariance method

Using the relations

$$\left(e^{jx} - e^{-jx} \right) = -2j \sin(x) \quad \text{and} \quad \left(e^{jx} + e^{-jx} \right) = 2 \cos(x)$$

and applying a coefficient comparison it is obtained:

$$H_z(z) = \frac{a_1 z^{-1}}{1 + b_1 z^{-1} + b_2 z^{-2}}$$

Thus the filter coefficients are determined as follows:

$$a_1 = \sqrt{2} \omega_T e^{-\frac{\omega_T T_a}{\sqrt{2}}} \sin\left(\frac{\omega_T T_a}{\sqrt{2}}\right)$$

$$b_1 = 2 e^{-\frac{\omega_T T_a}{\sqrt{2}}} \cos\left(\frac{\omega_T T_a}{\sqrt{2}}\right)$$

$$b_2 = -e^{-\frac{2\omega_T T_a}{\sqrt{2}}}$$

This digital system function can be realized e.g. directly by the canonical structures presented in chapter 1.4



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

Applying another method, called the bi-linear z-transform, one starts with a given system function $H_L(p)$ written as $H_L(p_k)$ of a realizable analog system, which should also be a causal and stable system with a real impulse response $h(t)$.

- $H_L(p_k)$ now is given as a function of the complex frequency:

$$p_k = \sigma_k + j\omega_k$$

- All poles and zeros of $H_L(p_k)$ must lie on the σ_k -axis or must appear as conjugated complex pairs, which provides a real impulse response $h(t)$.



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

From the system function $H_L(p_k)$ a stable and causal digital system with the system function $H_Z(z)$ can be developed if one replaces the argument p_k in $H_L(p_k)$ with a function of z .

For this function $p_k(z)$ holds:

- It is rational in z

- It is given by $p_k(z) = \frac{2}{T_a} \cdot \frac{z-1}{z+1}$ **Formula for bi-linear Z-transform**

The inverse function to $p_k(z)$ is: $z = \frac{1 + \frac{T_a}{2} p_k}{1 - \frac{T_a}{2} p_k}$



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

By using $z = e^{j\omega T_a}$ in the argument of $p_k(z)$ it results:

$$p_k(e^{j\omega T_a}) = \frac{2}{T_a} \cdot \frac{e^{j\omega T_a} - 1}{e^{j\omega T_a} + 1} = j \frac{2}{T_a} \cdot \tan\left(\frac{T_a}{2} \omega\right) = j\omega_k$$

$$\text{with } \omega_k = \frac{2}{T_a} \cdot \tan\left(\frac{T_a}{2} \omega\right) \Leftrightarrow \omega = \frac{2}{T_a} \cdot \text{arc tan}\left(\frac{T_a}{2} \omega_k\right)$$

Note:

ω is the frequency for the digital filter

ω_k represents the frequency in the p-domain



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

From this one obtains the periodic transfer function $H_{aF}(\omega)$ of the digital filter, by using the following relation:

$$H_z(e^{j\omega T_a}) = H_L(j\omega_k)$$

Summarizing:

The determination of the system function of the digital filter is thus obtained on the basis of the system function of the analog filter!

So by means of $p_k(z) = \frac{2}{T_a} \cdot \frac{z-1}{z+1}$ the function $H_L(p) \Big|_{p \rightarrow p_k}$ is turned into

$H_z(z)$ according to $H_z(z) = H_L\left(\frac{2}{T_a} \cdot \frac{z-1}{z+1}\right)$



3.5 Design of IIR Digital filter by means of bi-linear Z-transform



Please note:

If the variable ω_k of $H_F(\omega_k)$ of the analog system is varied from $-\infty$ to $+\infty$, $H_{aF}(\omega)$ of the digital system is run from $-\omega_a/2$ to $\omega_a/2$.

The next slide compares the frequency responses of the analog reference filter and the corresponding digital filter.



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

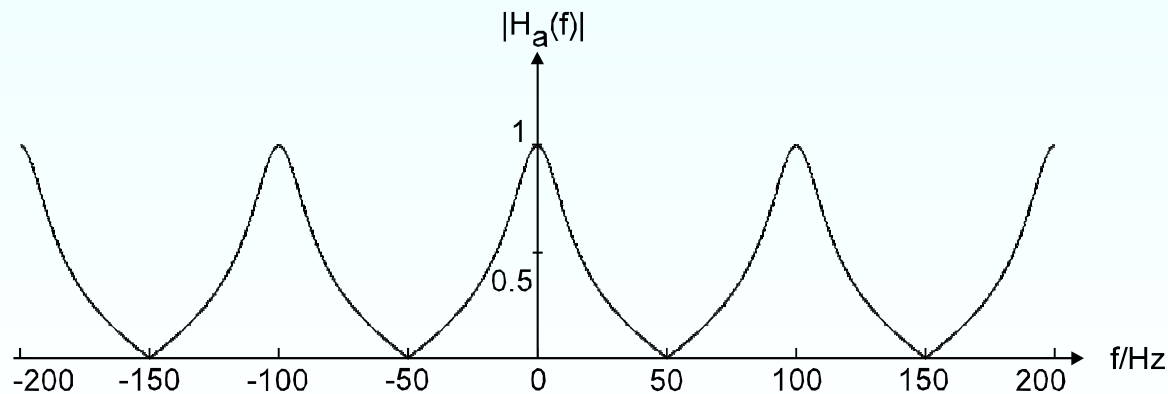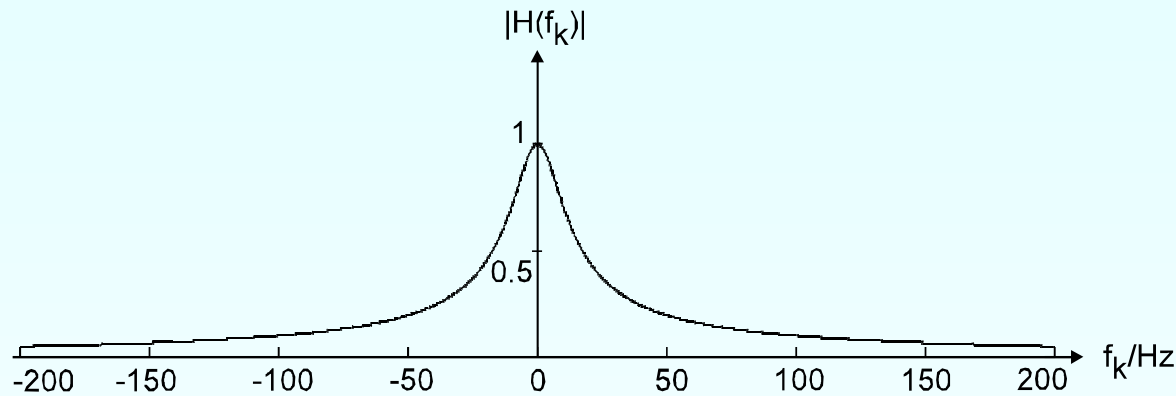

Transfer function of an analog prototype with $f_g = 10\text{Hz}$
and of the corresponding digital filter with $f_a = 100\text{ Hz}$

3.5 Design of IIR Digital filter by means of bi-linear Z-transform

Further characteristics of the bi-linear transform are:

1. The order of the derived digital filter agrees with the order of the given analog reference filter.
2. If the tolerance scheme for the analog filter includes piecewise horizontal parts, the same property will be true for the digital filter.
3. The frequency distortion especially for higher frequencies (close to half of the sampling rate) leads to the fact that the phase and envelope delay characteristics of the digital filter do not agree with those of the reference system.

For lower frequencies the distortion is very low so that the frequency response of the digital filter is close to that of the analog filter.



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

These distortions can be avoided for the low-pass (without proof) by using a modified function for $p_k(z)$ as follows:


$$p_k(z) = \omega_T \cdot \cot\left(\pi \frac{\omega_T}{\omega_a}\right) \cdot \frac{z-1}{z+1} \quad \text{instead of} \quad p_k(z) = \frac{2}{T_a} \cdot \frac{z-1}{z+1}$$

Example: Digital low-pass filter synthesis by means of the bi-linear transform

The tolerance pattern for the desired amplitude characteristic $|H_{aF}(\omega)|$ is given. It is represented in the following figure a).



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

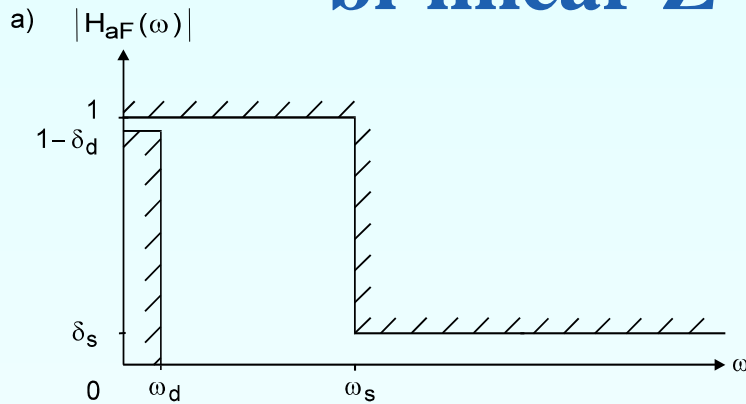

Given values:


$$\omega_d = 2\pi \cdot 1 \text{ Hz} = 6.28 \text{ rad/s}$$

$$\omega_s = 2\pi \cdot 6 \text{ Hz} = 37.7 \text{ rad/s}$$

$$\delta_d = 0.026$$

$$\delta_s = 0.15$$

$$\omega_a = 2\pi \cdot 20 \text{ Hz}$$

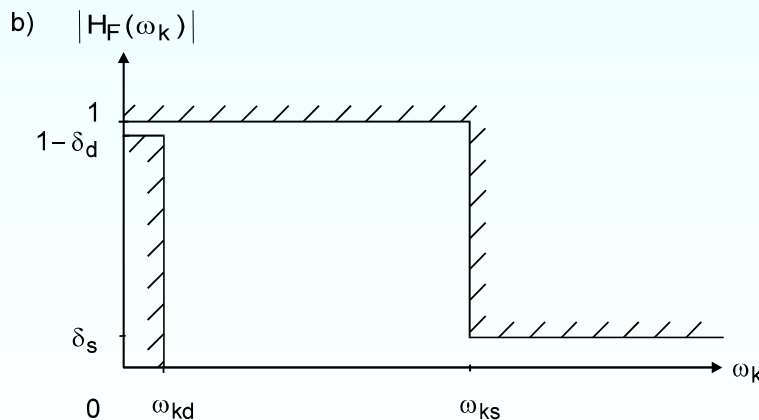

Tolerance pattern of the digital low-pass (figure a) and the frequency pre-distorted analog low-pass (figure b)

3.5 Design of IIR Digital filter by means of bi-linear Z-transform

For the sampling rate and the corresponding period it is given:

$$\omega_a = 2\pi \cdot 20 \text{ Hz} = 125.66 \text{ rad/s}$$

$$T_a = \frac{2\pi}{\omega_a} = \frac{1}{20 \text{ Hz}} = 0.05 \text{ s}$$

Conversion of the cut-off frequencies gives:

$$\omega_{kd} = \frac{2}{T_a} \cdot \tan\left(\frac{T_a}{2} \omega_d\right) = 6.33 \text{ rad/s} \quad \text{Note:}$$

$$\omega_{ks} = \frac{2}{T_a} \cdot \tan\left(\frac{T_a}{2} \omega_s\right) = 55.06 \text{ rad/s}$$

Small deviation for lower, significant deviation for the higher frequency!

Thus the modified tolerance pattern results according to figure b for the analog reference system.



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

The following system function $H_L(p_k)$ was chosen as it fulfils the tolerance pattern according to figure b:

$$H_L(p_k) = \frac{200 \omega_d^2}{p_k^2 + 20 \omega_d \cdot p_k + 200 \omega_d^2}$$

Replacing p_k with $p_k(z)$ according to $p_k(z) = \frac{2}{T_a} \cdot \frac{z-1}{z+1}$

gives the system function $H_z(z)$ of the digital filter:

$$H_z(z) = \frac{200 \cdot \omega_d^2}{\left(\frac{2}{T_a} \cdot \frac{z-1}{z+1}\right)^2 + 20\omega_d \cdot \left(\frac{2}{T_a} \cdot \frac{z-1}{z+1}\right) + 200\omega_d^2}$$



3.5 Design of IIR Digital filter by means of bi-linear Z-transform

After using the numerical values for ω_d and T_a , one obtains:

$$\begin{aligned} H_z(z) &= \frac{0.077z^2 + 0.154z + 0.077}{z^2 - 0.92z + 0.385} \\ &= \frac{0.077 + 0.154z^{-1} + 0.077z^{-2}}{1 - 0.92z^{-1} + 0.385z^{-2}} \end{aligned}$$

Again it is recommended to use a canonical structure for this system according to the descriptions in chapter 1.4.



NETWORK THEORY 3

Advanced Digital Filter

Chapter 4

Switched Capacitor Filter

Prof. Dr.-Ing. I. Willms

UNIVERSITÄT
DUISBURG
ESSEN

Fachgebiet
Nachrichtentechnische Systeme


Network Theory 3
S. 53



SC-Filter

Some problems of analog filters are:


- Low filter order
- Temperatur stability of components
- Complicated design for changeable cut-off or center frequencies
- SC filters using switching elements are a possible solution

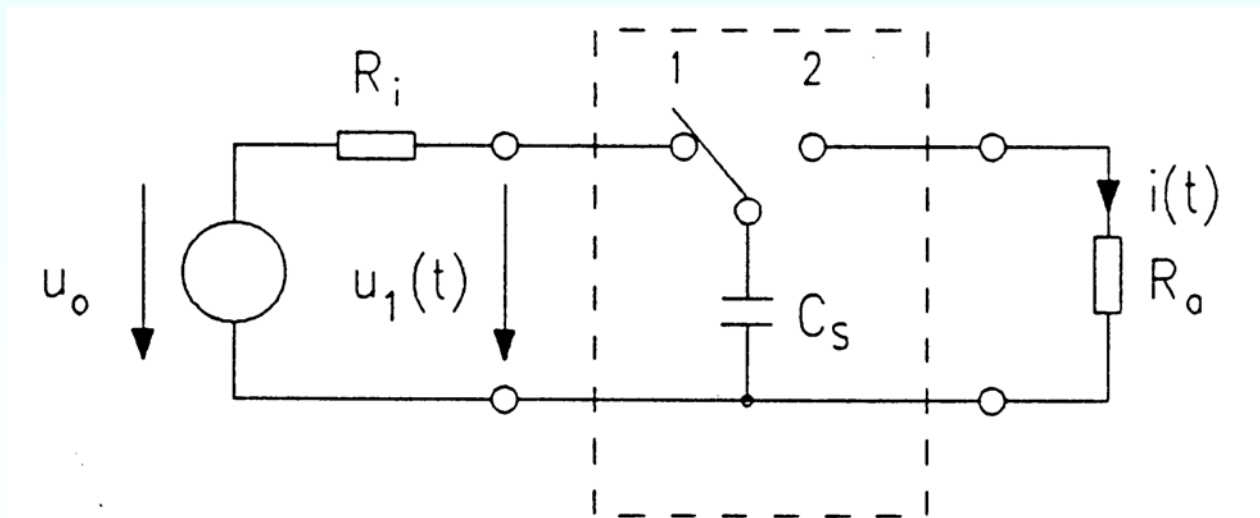

The basic circuit produces current impulses proportional to input voltage

SC-Filter

- $R_i C_s$ and $R_a C_s$ have to be short enough for complete charge/discharge in T_s
- The charge Q_s obtained in C_s is identical to the integration of current $i(t)$ during the load cycle
- To drive a load without affecting the load process an additional OP amp is attached:

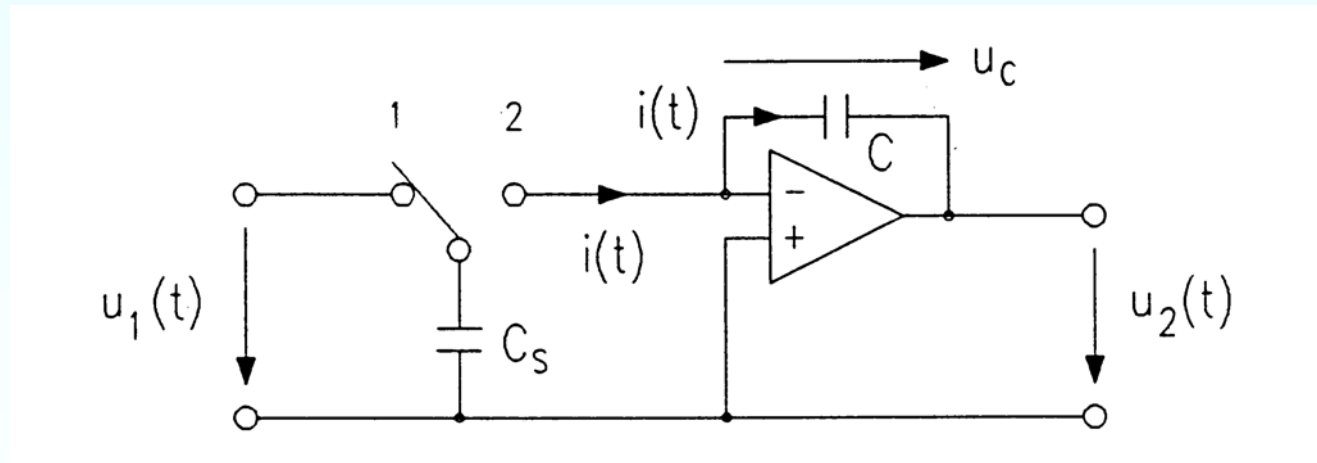


In each period T_s the charge Q_s is moved from C_s to C

SC-Filter

In each period T_s the charge on C is increased by Q_s leading to decrease of out voltage by $Q_s/C = C_s u_0/C$

This gives an output voltage according to the following form in case of a step function at the input:

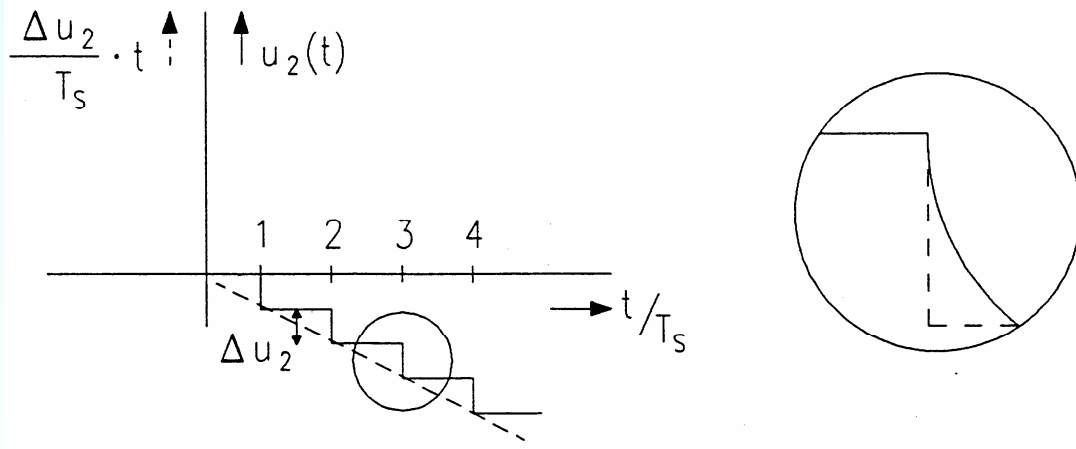


Apart from the tiny steps the output voltage then follows:

$$u_2(t) \approx -\frac{C_s}{CT_s} u_0 t \cdot \varepsilon(t) \text{ corresponding to}$$

$$u_2(t) \approx -\int_{-\infty}^t u_1(\tau) d\tau$$


SC-Filter

- If steps can be made small in height and duration an inverting integrator (as a „normal“ LTI-system) is achieved
- Small step height means a small C_s / C value like 1/100
- Small duration means a high f_s value compared to the highest frequency component of the low-pass input signal
- Further reduction of the steps are achieved by subsequent low-pass filtering
- A non-inverting integrator circuit only needs a second switch:

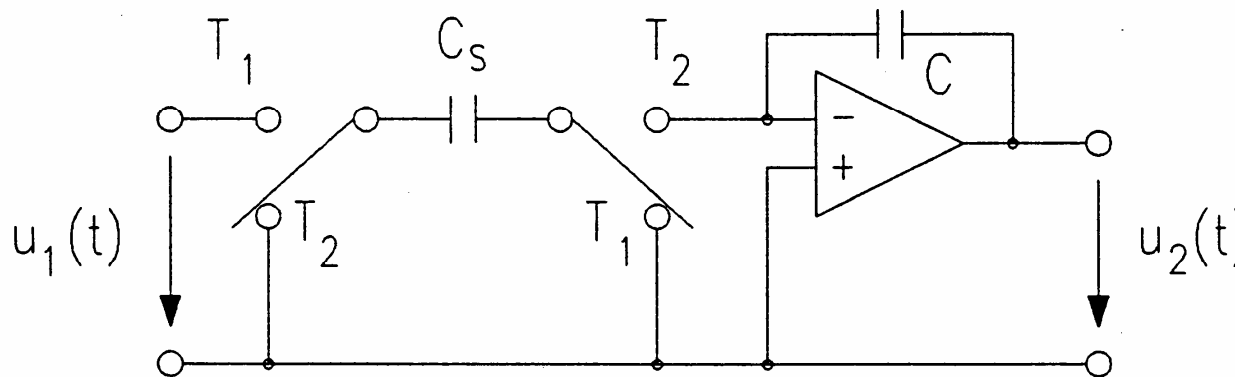

SC-Filter

- For this basic SC circuit the following symbol is used:

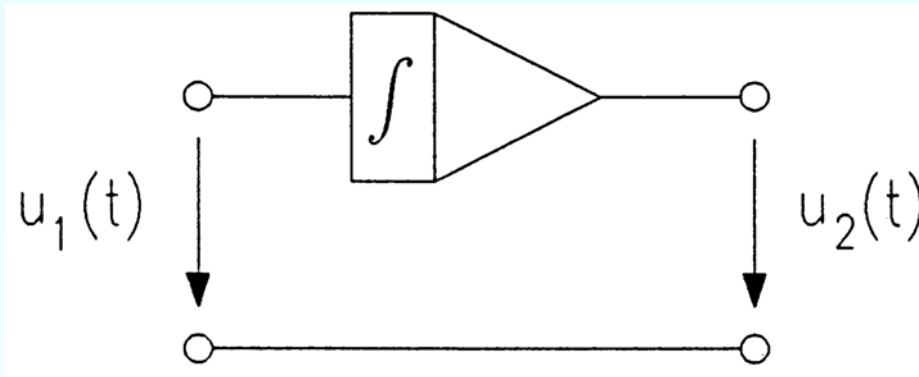


If tiny steps can be neglected and/or filtered out it holds:

$$u_2(t) = \frac{C_s}{CT_s} \int_{-\infty}^t u_1(\tau) \quad \text{or} \quad U_2(p) = K \frac{1}{p} U_1(p) \quad \text{with} \quad K = \frac{C_s}{CT_s}$$

SC-Filter

- Analysis of low-pass/high-pass 1st order (determination of system function)
- A basic circuit for combined SC low-pass/high-pass behaviour

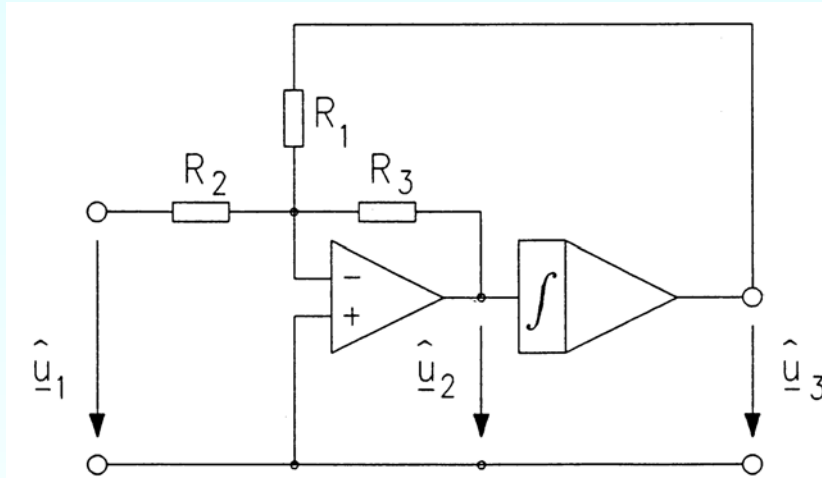

For the circuit holds:

$$U_2(p) = -\frac{R_3}{R_2}U_1(p) - \frac{R_3}{R_1}U_3(p) \quad \text{and} \quad U_3(p) = \frac{K}{p}U_2(p) \quad \text{lead to}$$

$$U_2(p) = -\frac{R_3}{R_2}U_1(p) - \frac{R_3K}{pR_1}U_2(p) \quad \text{or}$$

$$U_2(p)\left(1 + \frac{R_3K}{pR_1}\right) = -\frac{R_3}{R_2}U_1(p) \Rightarrow H_{LHP}(p) = \frac{-R_3/R_2}{1 + \frac{R_3K}{pR_1}}$$

SC-Filter

Moreover it holds:

$$U_3(p) = \frac{K}{p} U_2(p) = \frac{K}{p} U_1(p) \frac{-R_3 / R_2}{1 + \frac{R_3 K}{p R_1}} \Rightarrow H_{LLP}(p) = -\frac{K R_3 / R_2}{p + \frac{R_3 K}{R_1}} = -\frac{R_1 / R_2}{1 + \frac{R_1}{R_3 K} p}$$

According to the usual cut-off frequency definitions it is obtained:

$$\frac{C T_s}{C_s R_3} \omega_{LP} = 1 \Rightarrow \omega_{LP} = \frac{C_s R_3}{C T_s R_1} = \frac{C_s R_3}{C R_1} f_s$$

$$\frac{C_s R_3}{C T_s R_1} \frac{1}{\omega_{HP}} = 1 \Rightarrow \omega_{HP} = \frac{C_s R_3}{C R_1} f_s$$


This means that:

- Cut-off frequencies can be changed in a wide range without variation of component values
- These frequencies are only depended on 2 relations of 2 capacitors and 2 resistors
- On a chip the temperatur dependencies of the fractions are negligible



SC-Filter

A low-pass/high-pass/band-stop of 2nd order:

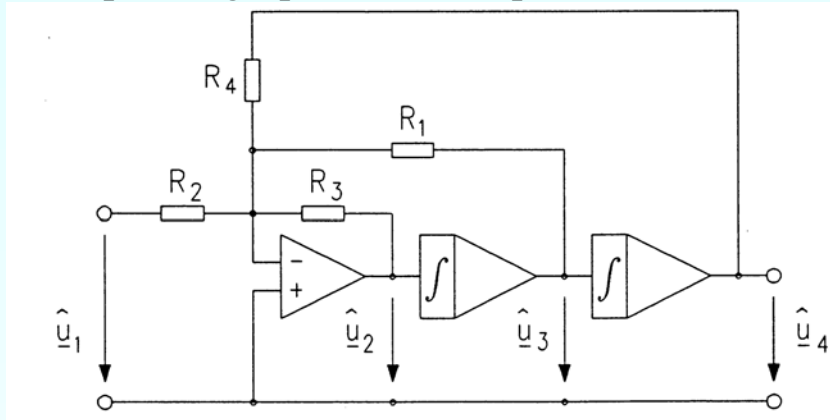

For this circuit holds:

$$H_{LHP}(p) = -\frac{R_3 / R_2}{1 + \frac{R_3 K}{R_1} \frac{1}{p} + \frac{R_3 K^2}{R_4} \frac{1}{p^2}} \text{ with output: } U_2(p)$$

$$H_{LLP}(p) = -\frac{R_4 / R_2}{1 + \frac{R_4}{R_1 K} p + \frac{R_4}{R_3 K^2} p^2} \text{ with output: } U_4(p)$$

$$H_{LBP}(p) = -\frac{\frac{R_4}{R_2 K} p}{1 + \frac{R_4}{R_1 K} p + \frac{R_4}{R_3 K^2} p^2} \text{ with output: } U_4(p)$$

SC Filter

Example for LP 2nd order dimensioning with given values:

$$A_0 = 10 \quad \omega_g = 10^3 \text{ s}^{-1} \quad f_s = 1 \text{ MHz} \quad \frac{C_s}{C} = 0.01$$

with a required system function of $H_{LN}(P) = \frac{A_0}{1+P}$ giving

$$H_L(p) = \frac{-10}{1+p/10^3 \text{ s}^{-1}} \text{ and for the circuit } H_{LLP}(p) = -\frac{R_1/R_2}{1+\frac{R_1}{R_3K}p} \text{ resulting in the conditions}$$

$$\frac{CT_s R_1}{C_s R_3} = \frac{1}{\omega_g} \quad \text{and} \quad \frac{R_1}{R_2} = 10$$

Due to only 2 conditions for 3 unknowns it might be specified:

$$R_1 = 100 \text{ K}\Omega \text{ giving } R_2 = 1 \text{ K}\Omega \text{ and } R_3 = \frac{CT_s R_1 \omega_g}{C_s} = 1 \text{ K}\Omega$$



SC Filter

Typical data for low-cost SC circuits

- 1 to 4 filters of 2nd order for free attachable components on a chip
- Fixed LP/HP/BP/BS filter circuits with Butterworth/Bessel/Tchebyscheff and Cauer characteristic of 4th to 10th order
- Clock frequency f_s is beyond 10 MHz
- S/N ration in the order of 70 to 90 dB
- LP-filtering for minimizing steps are on the chip

